



FRONT DOOR CLOSURE DEFEAT

Use above outline to create an insert made of stiff material such as packaging cardboard or plastic from drink containers for more durability. Since it blocks an optical sensor, if you use semi transparent plastic, black out the end that says "Into Printer" with a permanent marker. If you choose to use cardboard the blacking out is not necessary.

You will slip this into the printer to the left of the hinge between PM and R as shown in the photo below. Slide the insert to the bottom of the printer in a rotating motion. When it is placed properly the display showing the pictures will disappear.

It is recommended that the defeat be removed each time refilling is done as the printer expects that the door will be open when this is done. We will oblige that requirement.

