


Priming The Cartridges

It is important that the cartridges be properly primed before being used in the printer. Not doing so will result in massive banding and bad print quality. Note that there is a refill plug and a vent plug. The refill plug must be removed when priming and replaced thereafter. The vent plug must be removed during use to allow ink to flow into the printer. When properly primed the indicated chamber will be filled with ink.

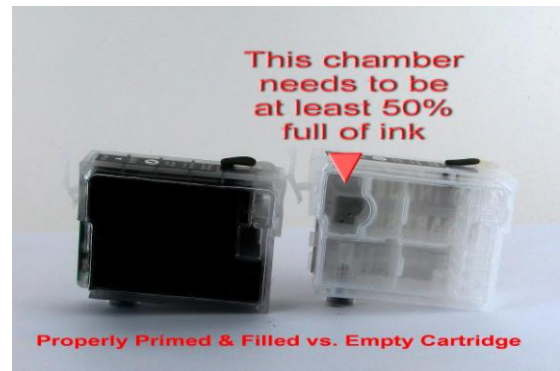

To prime the cartridge, attach the adapter to the syringe, draw approx 8-10 ml of ink into the syringe. Remove the refill plug. Following the picture, insert the syringe tip up the cartridge outlet hole till it meets some resistance. Push approx 1/8" further inside. Proceed to inject the 8-10 ml of ink inside while holding the cartridge upright. Withdraw the syringe and tip.

Using the normal refill hole, finish filling the cartridge and then replace the refill plug. Remove the air vent plug before use in the printer.

